


Sebel Adjustable Chair Trolley



> Assembly Instructions


1

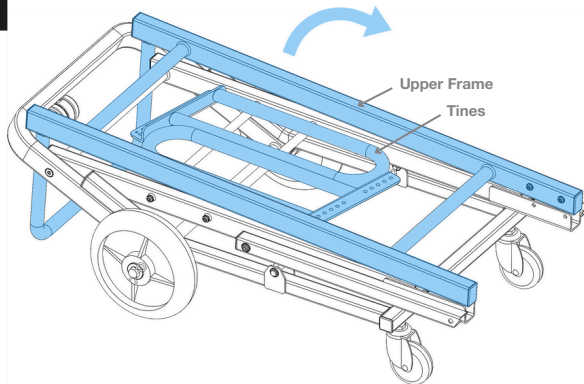

Cut the ties and remove Upper Frame and Tines from carton and place aside. Remove the trolley from box to assemble it.

2


Lift the lower frame up and prop with the angled stays.

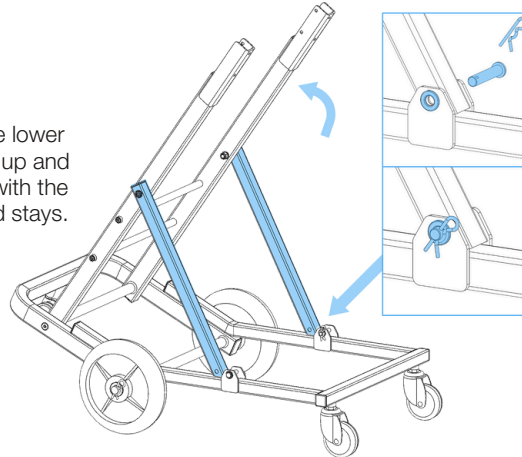

Remove the R-clips and pins from both sides and then reinstall them through the stay arm holes and tabs.

3


Flip the trolley upside down. Remove the 8 bolts and washers from the upper frame. Insert the upper frame ends into the 'U' channels.

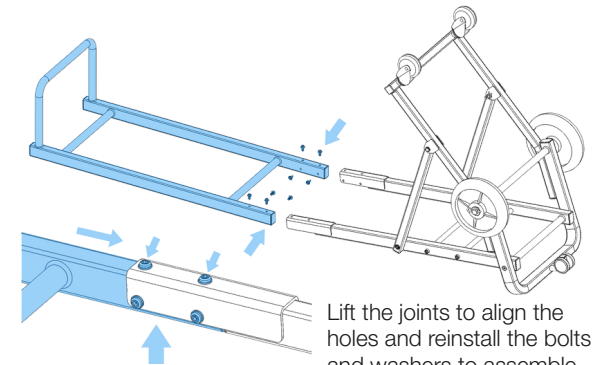

Lift the joints to align the holes and reinstall the bolts and washers to assemble the frame.

4


Stand the trolley right way up and remove the 4 bolts and washers from the sides of the frame.

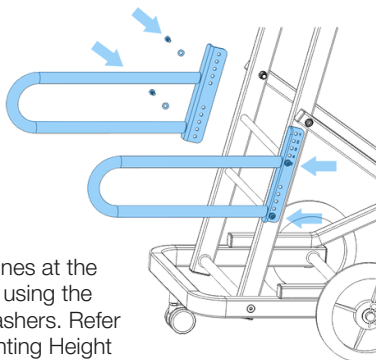

Install both tines at the same height using the bolts and washers. Refer to Tine Mounting Height table.

Important Note

The tines must be attached correctly to suit the Chair being moved. Attach the tines symmetrically on the Outside (A), OR front (B), of the frame uprights at the correct height to suit the chairs used. See reference table.

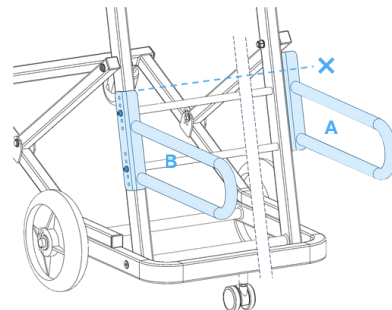

Tine Mounting Height

Chair	Tine	Hole #
Lumba Chair	Outside (A)	5
Lumba Chair with Arms	Outside (A)	4
Progress Chair	Outside (A)	3
Postura Max Size 6	On Frame (B)	3
Postura Plus Linking Chair	Outside (A)	2
Postura Max Chair Size 5	On Frame (B)	1

Care Instructions

- Regularly check that all bolts and casters are properly tightened. Especially the upright frame joints.
- Clean as required with a soft, dry or damp cloth.
- Store trolley upright and unloaded on a level surface.
- Do not store in a damp area or in direct sunlight to prevent rust or fading.